J108BL
INSTRUCTION MANUAL

Contents

Warnings & Precautions 2

Important Safety Instructions 3

In the Box & Features 4

Powering the Unit 5

Playing a CD or CD+G 6

Programming a CD or CD+G 7

Video Out: Connecting to a Television 8

Location of Controls & Definitions 9-11

Service Information 12

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Safety Instructions

1. Read these instructions. All the safety and operating instruction should be read before the product is operated.

2. **Keep these instructions**. The safety and operating instruction should be retained for future reference.

3. **Heed all warnings**. All warning on the product and in the operating instructions should be adhered to.

4. **Follow all instructions**. All operating and use instructions should be followed.

5. **Water and Moisture:** Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

6. **Cleaning**: Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.

7. Ventilation: Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8. **Heat:** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. **Grounding or Polarization:** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. **Power-Cord Protection:** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. **Accessories:** Only use attachments/accessories specified by the manufacturer. Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

12. A product and cart combination should be moved with care. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

PORTABLE CART WARNING

S3125A

13. **Lightning:** Unplug this apparatus and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.

14. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards . Refer all servicing to qualified service personnel.

15. **Power Sources:** Only connect to the type of house-hold power supply as indicated in the operating instructions and rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.

16. Overloading: Do not overload wall outlets or extension cords as this can result in a risk of fire or electric shock.

17. Object and Liquid Entry: Never push objects of any kind or spill liquid into this product through openings as this could result in a risk of fire or electric shock.

18. **Replacement Parts and Safety Check**: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer. Ask the service technician to perform safety checks to ensure proper operation to avoid possible fire, electric shock, or other hazards.

19. Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna connection to grounding electrodes, and requirements for the grounding electrode.

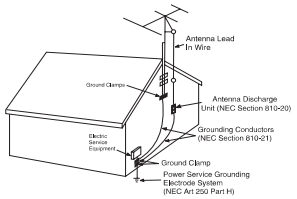
Antenna Lead In Wire
Ground Clamps
Antenna Discharge Unit (NEC Section 810-20)
Grounding Conductors (NEC Section 810-21)
Electric Service Equipment
Ground Clamp
Power Service Grounding Electrode System (NEC Art 250 Part H)

20. Wall or Ceiling Mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

21. Where the AC plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

22. Protective Attachment Plug: The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

23. **Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

In the Box

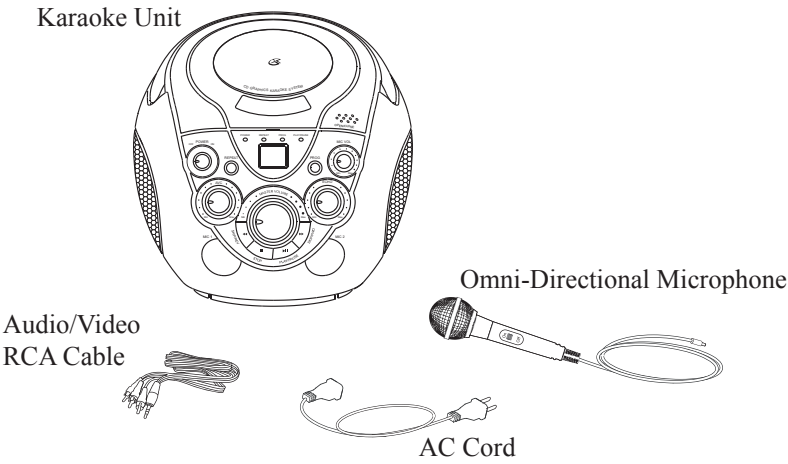

- Karaoke Unit
- Audio/Video RCA Cable
- Omni-Directional Microphone
- AC Cord

Features

- Plays CD or CD+G discs
- Programmable Tracks
- One-Touch Repeat
- Automatic Voice Control System
- Echo Controls
- Two Microphone Outputs
- Audio/Video Outputs, A/V RCA Cable included.
- AC/DC Power

Powering the Unit

The unit can be powered by the AC Cord when plugged into a standard 120V outlet.

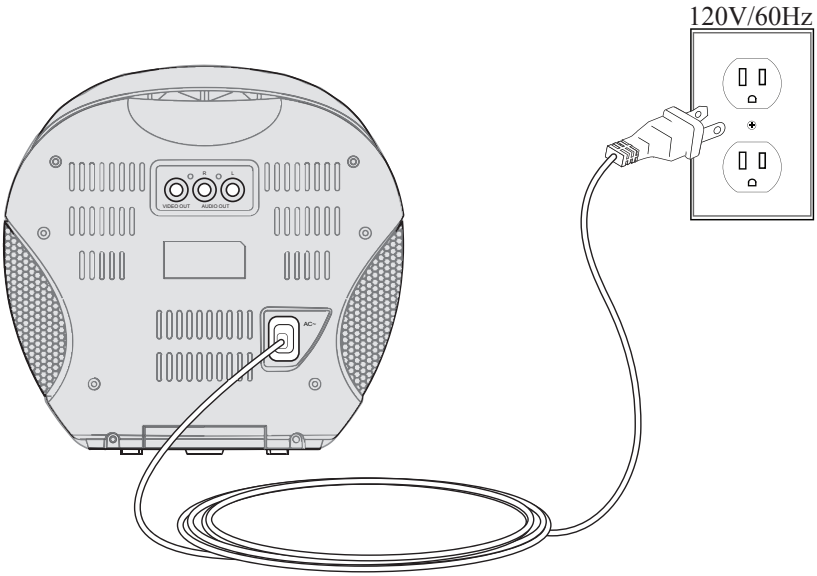

Battery Information

The unit can be powered by 8 C-Sized Batteries (not included).

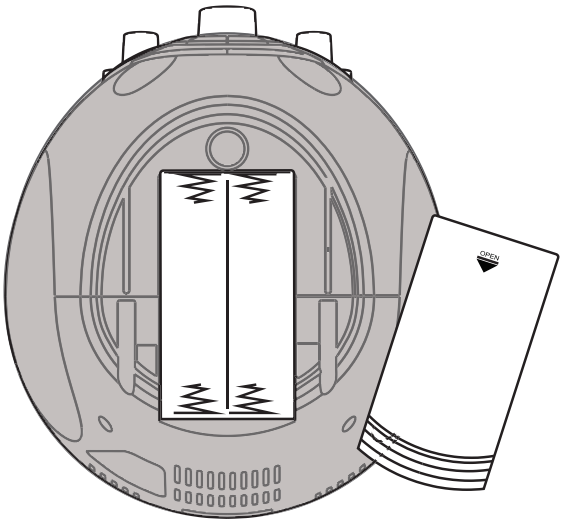

Playing a CD+G or CD

1 Plug the unit into a standard 120V outlet, turn the power on, and load a standard CD+G Karaoke Disc into the unit.

2 If playing a CD+G, plug the included Omni-Directional Microphone into a **Microphone Input**, and turn the Microphone on.

3 Press the **Play/Pause Button** to play the loaded CD+G.

4 Turn the **Volume Dial** to adjust the volume.

5 Press the **Skip & Search Buttons** to skip tracks , or press and hold the **Skip & Search Buttons** to search through an individual track.

The search feature will only work with CDs.

6 Press the **Stop Button** to stop a CD or CD+G during play.

7 Press the **Repeat Button** once to repeat an individual song; when activated, the Repeat Indicator will blink red. Press the Repeat Button twice to repeat an entire CD; when activated, the **Repeat Indicator Light** will turn red without blinking.

7 Turn the **Microphone Volume Dial** to adjust the volume of microphone

If microphone feedback noise occurs, turn the microphone volume down and/or move the mic away from the unit's speakers.

8 Turn the **Automatic Voice Control Dial** to compensate for varying levels of volume from the microphone.

9 Turn the **Echo Dial** to adjust the degree of echo output from the speakers.

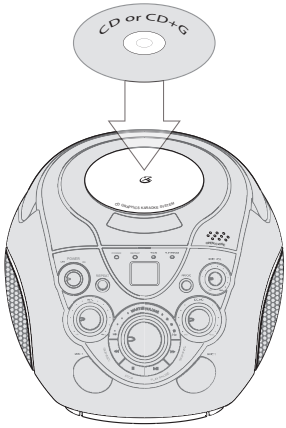

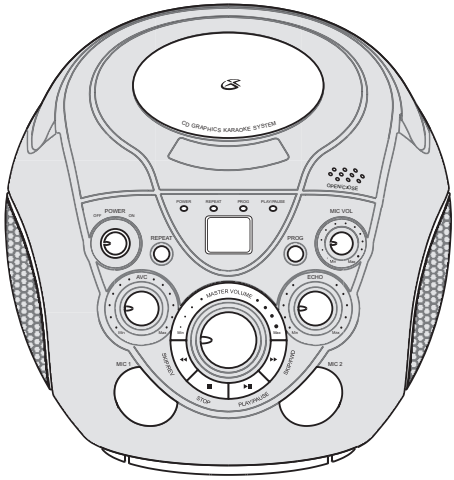

Programming a CD+G or CD

1. Load the CD or CD+G Disc into the unit's CD-Drive, located on the top of the unit.
2. Press the **Program Button** to begin programming the CD or CD+G Disc (the **Program Indicator Light** will blink red).

   The CD or CD+G disc must be stopped in order to create a program.
3. Select a CD or CD+G track using the **Skip & Search Buttons.**
4. Once the desired track is selected, press the **Program Button**.
5. Repeat steps **3**. and **4**. until all of the desired tracks are programmed. This unit allows up to 19 tracks to be programmed.
6. Press the **Play/Pause Button** to begin playing the programmed tracks.

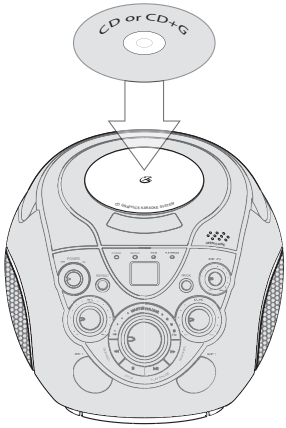

Video Out: Connecting to a Television

When connecting two products using an RCA Cable, match the colored ports with the same colored connection. (Red to Red, White to White, and Yellow to Yellow)

The Video Output must be used in order to see lyrics from a loaded CD+G Karaoke Disc.

1 Plug one end of the RCA Cable (included) into the **Video Output** and **Audio Output** on the karaoke unit.

2 Plug the other end of the RCA Cable into a video and audio inputs on the television.

3 Set the television to the appropriate video input.

4 Follow the instructions on page 6 for *Playing a CD+G.*

5 Lyrics from a CD+G disc will now display on the television.

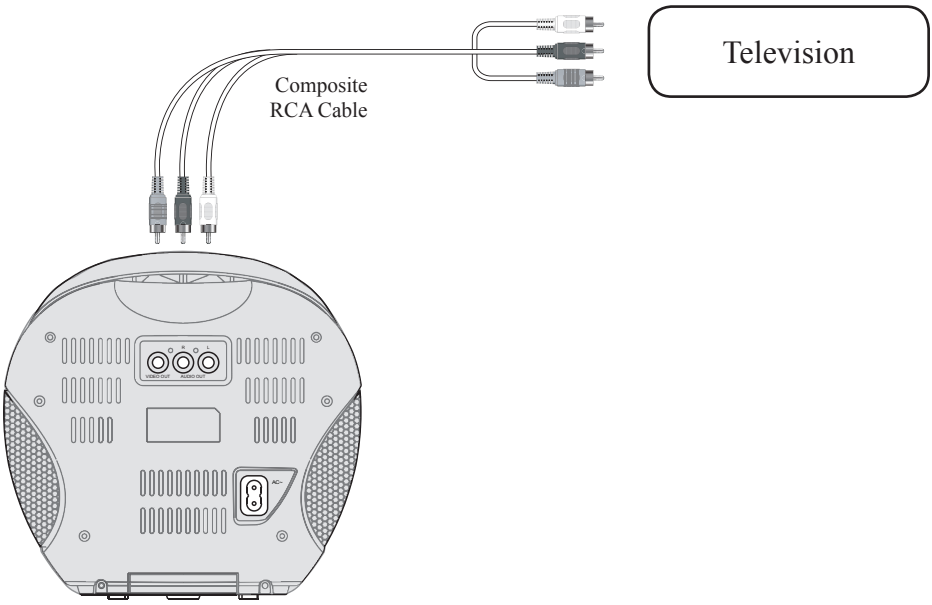

Location of Controls & Definitions

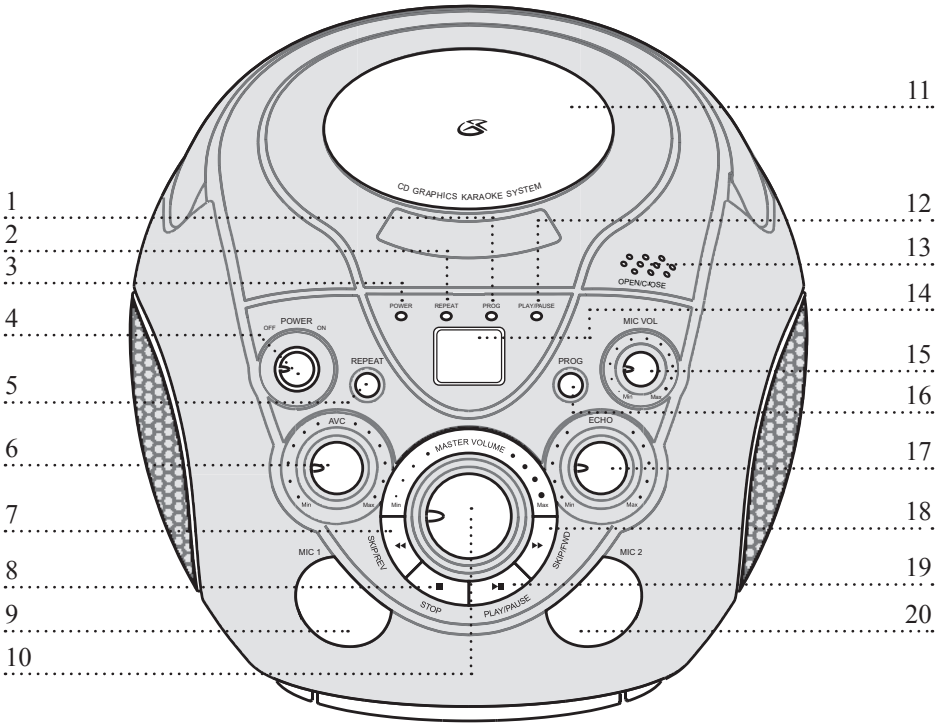

1 Program Indicator
The Program Indicator lights up when the unit is in Program Mode. See the Operations section for instructions on how to program a CD and CD+G.

2 Repeat Indicator
The Repeat Indicator blinks when repeating a single song from a CD or CD+G disc. The Repeat Indicator lights up when repeating an entire CD or CD+G album.

3 Power Indicator
The Power Indicator lights up when the unit is powered on.

4 Power Button
Rotate the Power Button to turn the unit off and on.

5 Repeat Button
Press the Repeat Button once to repeat an individual song; when activated, the Repeat Indicator will blink red. Press the Repeat Button twice to repeat an entire CD; when activated, the Repeat Indicator Light will turn red without blinking.

Control Definitions

6 Auto Voice Control Dial
The Automatic Voice Control Dial adjusts the volume of the unit to compensate for varying levels of volume from the microphone. Turn the dial to adjust the degree to which the Automatic Voice Control Dial compensates for variations in volume.

7 Skip ⏮ Button
Press the Skip ⏮ button to skip backwards through a CD or CD+G's tracks. Press and hold the Skip ⏮ button to search backwards through an individual CD track.

8 Stop Button
Press the Stop Button to stop a CD or CD+G during play.

9 Microphone 1 Input
Use the Microphone Inputs as a receptacle for a microphone plug (one microphone included).

10 Volume Dial
Turn the Volume Dial to adjust the volume of audio playing through the unit's speakers.

11 CD Door/Drive
The CD Drive will read and play CD and CD+G discs

12 Play & Pause Indicator
The Play & Pause Indicator lights up when a CD or CD+G is playing. The Play & Pause Indicator blinks when a CD or CD+G is paused.

13 Open/Close Button
Press the Open/Close Button to open and close the CD Door.

14 LED Display
The LED Display shows CD and CD+G track numbers, a Power Indicator, Program Indicator, Play/Pause Indicator, and a Repeat Indicator.

15 Microphone Volume Dial
Turn the Microphone Volume Dial to adjust the volume of the Microphone Inputs.

16 Program Button
Press the Program Button to begin programming a CD or CD+G. Up to 19 tracks can be programmed at one time. When in Program Mode, the Program Indicator will blink. See the Operations section for instructions on how to program a CD and CD+G.

17 Echo Dial
Turn the Echo Dial to add an echo effect to the microphone inputs.

18 Skip ⏭ Button
Press the Skip ⏭ button to skip forwards through a CD or CD+G's tracks. Press and hold the Skip ⏭ button to search forwards through an individual CD track.

19 Play & Pause Buttons
Press the Play & Pause Buttons to play and pause a CD or CD+G.

20 Microphone 2 Input
Use the Microphone Inputs as a receptacle for a microphone plug (one microphone included).

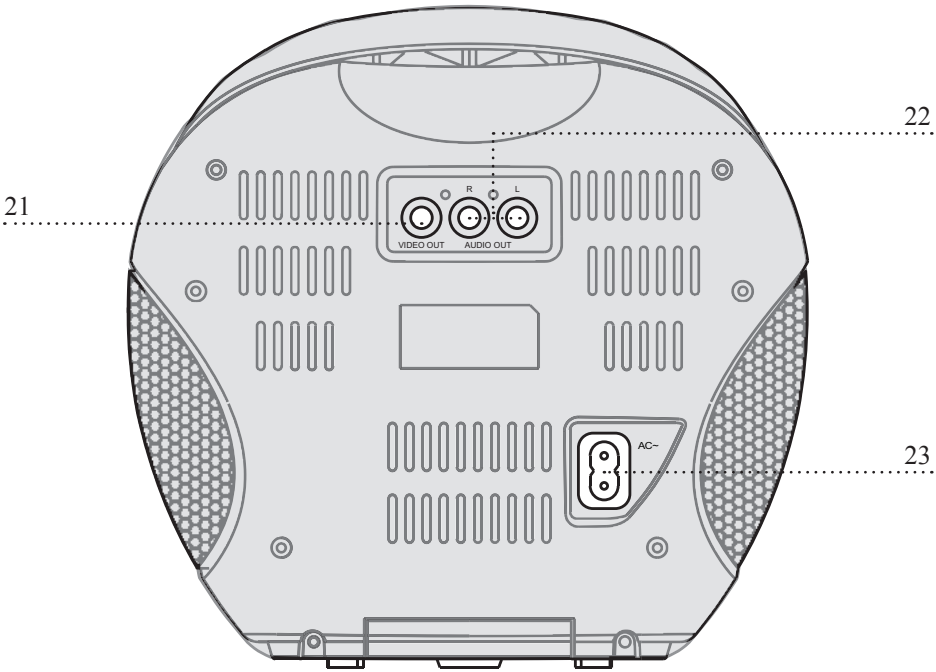

21 Video Output (Composite)
Use the Composite Video Output to send CD+G lyrics from the unit, to a television.

22 Audio Output
Connect the Audio Output to an external audio source to play audio from the unit, on an external source.

23 AC Power Input
Connect the AC Power Input to a standard AC outlet to power the unit.

Service Information

Address 2116 Carr Street, St. Louis MO, 63106
Phone 1-314-621-2881
Fax 1-314-588-1805
Email prodinfo@gpx.com
Website www.gpx.com

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.gpx.com.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.gpx.com.

© 2007 DPI, Inc. All trademarks appearing herein are the property of their respective owners. All products subject to change without notice.